





SAFETY PRECAUTIONS:

1. TURN OFF ELECTRICAL POWER BEFORE STARTING INSTALLATION OF LAMPS.
2. THIS PRODUCT MUST BE INSTALLED IN ACCORDANCE WITH THE APPLICABLE INSTALLATION CODE BY A PERSON FAMILIAR WITH THE CONSTRUCTION AND OPERATION OF THE PRODUCT AND THE HAZARDS INVOLVED.

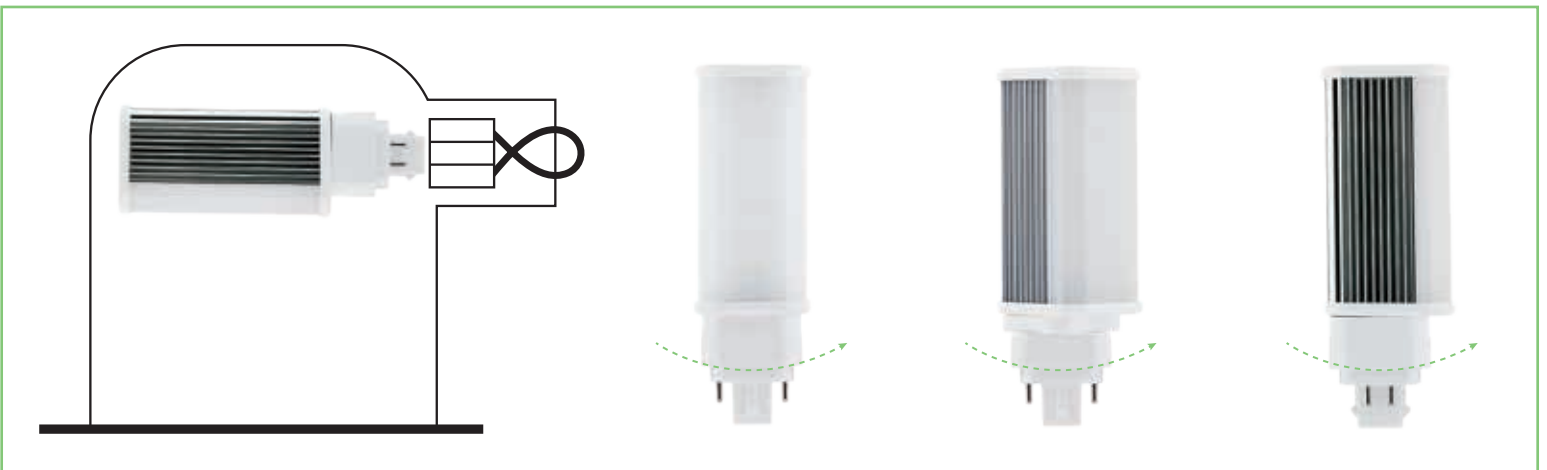


STEP 3: Install the ESL Vision PL lamp into existing socket. If more room is needed in fixture the ESL Vision PL lamp is designed with an adjustable base for easier installation.

Working without Ballast

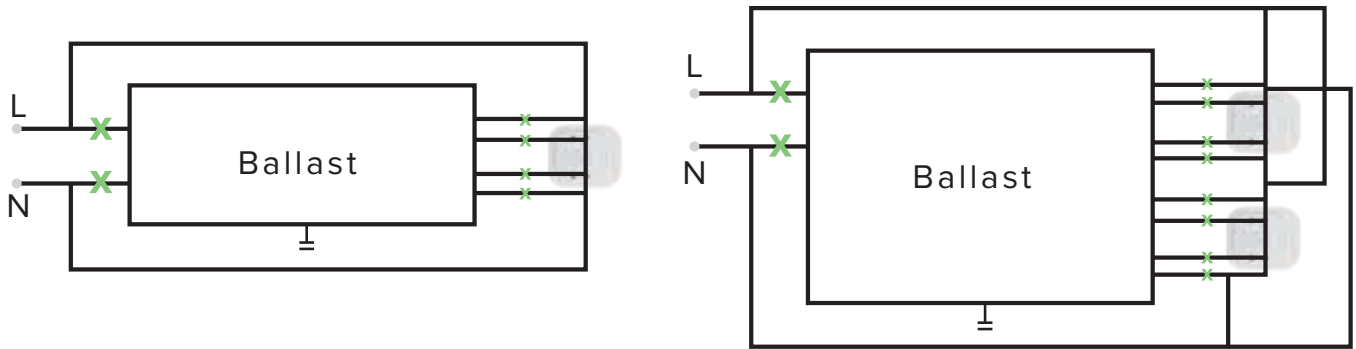

Working with Ballast

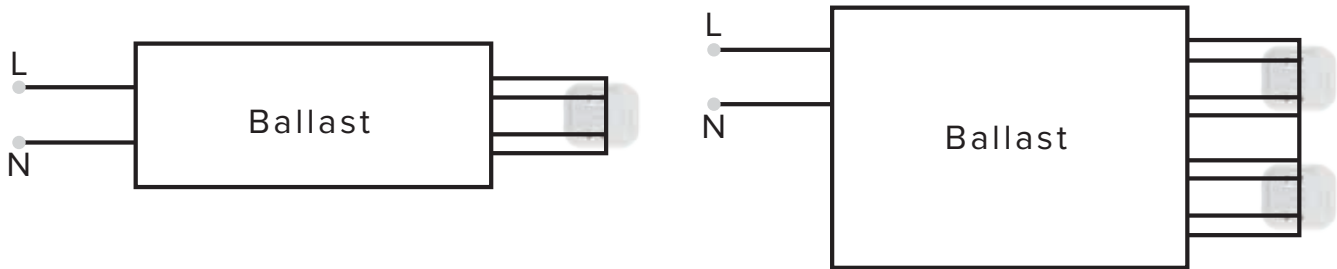

STEP 4: If lamp fails to operate (no light output, flickering, or low light output) after restoring power back to the fixture it is recommended to follow below wiring diagram to bypass the ballast and run direct voltage to sockets.

