

# **AREA LIGHT** INSTALLATION GUIDE

### **Direct Arm Mount**




- 1. To avoid electric shock, disconnect power at source prior to installation.
- 2. The installation should be performed by qualified electricians or lighting technicians.
- 3. Before conducting any installation, maintenance, or removal, disable all power to the luminaries and wait until the fixture cool down.
- **4.** Do not touch the fixture while it is in service.
- 5. If there is any problem with the fixture, turn off power and DO NOT attempt repair unless you are a qualified electrician.

#### STEP 1:

Open the package, remove the packing materials, and take out the ESL Vision Area Light.

#### STEP 2:

Remove the bolts and gasket from the mounting bracket as shown in Fig. 1

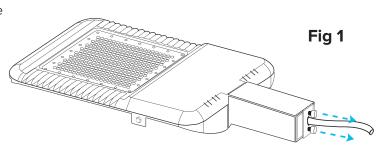



#### **STEP 3:**

Drill holes on the square pole according to the hole position on the mounting bracket. Feed the driver cable on the lamp through the holes to the pole. Align holes on the pole then place the bolts from the inside of the pole to the Area Light bracket. Tighten bolts as shown in fig 2.

#### **STEP 4:**

Make the wire connections as shown below.

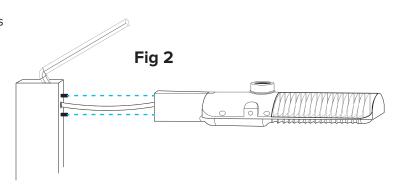


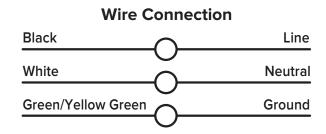






# **AREA LIGHT** INSTALLATION GUIDE

### Technical Specifications

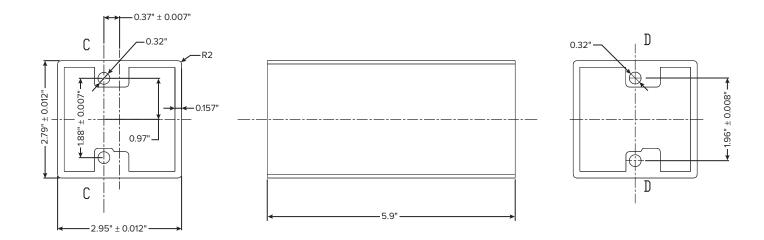

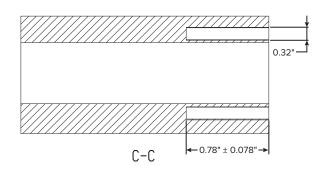

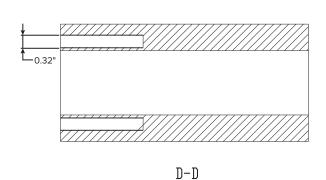

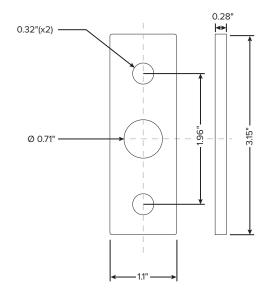

Catalog # ESL-AL-DM-INSTALL-2019 ESL Vision, LLC 2019

