


821 SERIES


Panel Installation Guide

- 1. To avoid electric shock, disconnect power at source prior to installation.
- 2. The installation should be performed by qualified electricians or lighting technicians.
- 3. Before conducting any installation, maintenance, or removal, disable all power.
- 4. Do not touch the fixture while it is in service.
- 5. If there is any problem with the fixture, turn off power and DO NOT attempt repair unless you are a qualified technician or the customer service member.


Recessed Installation

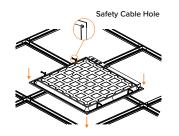


Insert into ceiling grid. Secure safety cable to connection hole as needed according to local building codes.

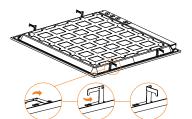

 $2^{\text{Lift up the four mounting clips}}$ on the sides of the fixture and twist into position.

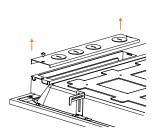


Remove enclosure cover and remove knockout for AC input and 0–10V control lines. Install fittings in knockout holes if needed.

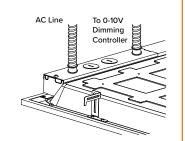


4 Connect the AC line (L, N and GND) to the LED Driver using 18–14AWG wire as shown in **Wiring Diagram 2**.


Surface Mount Installation

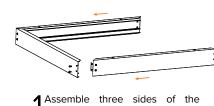


Assemble three sides of the bracket using the included screws.

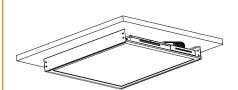

4 Push the conduit hose back into the surface mount frame and fully insert the luminaire. When installed properly the luminaire will rest on the flanges of the frame.

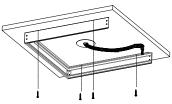


2 With the open side facing the junction box, ensure the frame is square, then secure with appropriate fasteners.

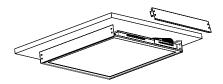

5 Slide the final side of the frame into the slots, ensuring that it locks into place. Secure with the included screws.



Pull the conduit hose towards the open side, then insert luminaire partially into the mounting bracket. Make all electrical connections as shown in **Wiring Diagram 2**.

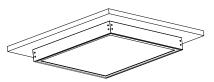


6 Installation is complete. Your fixture is ready to power on.




Page 1 of 2



Page 2 of 2

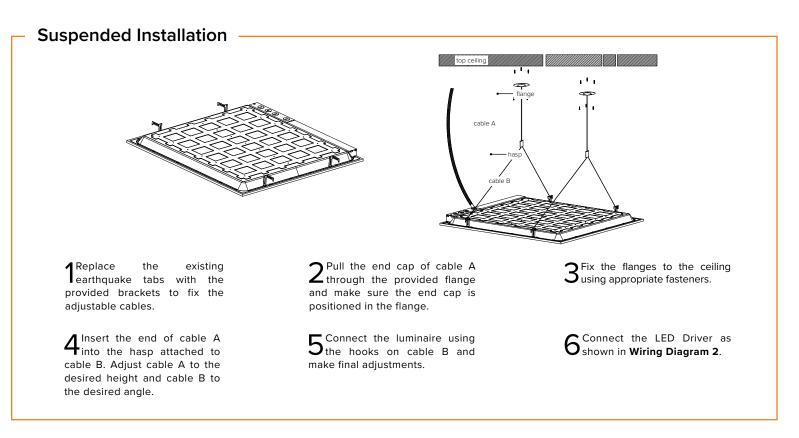

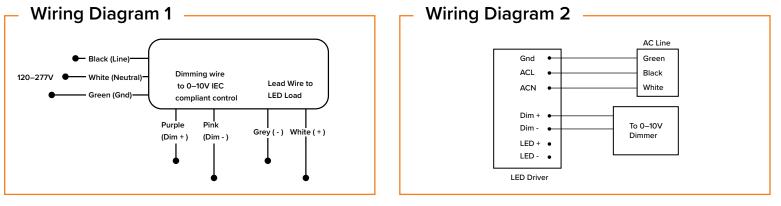

Field Adjustable Wattage and CCT Nelvin and wattage can be adjusted using the dip switches located on the driver. 2 Select the desired kelvin and wattage by sliding the dip switch. Wattage Switch

888.493.5559

🔀 info@eslvision.com

Copyright © 2022 ESL Vision, LLC. All rights reserved. Rev: 07/19/22