


EMERGENCY DRIVER SERIES


EMG BOX Installation Guide

Page 1 of 2

WARNING


- 1. This emergency driver provides more than one power supply output source. To avoid electric shock, disconnect power at source prior to installation.
- 2. The installation should be performed by qualified electricians or lighting technicians.
- 3. Do not attempt to service the battery. A sealed, no-maintenance battery is used and is not field replaceable. Replace the entire unit when necessary.
- 4. The emergency driver requires a constant AC power source of 100-347VAC, 50/60Hz.
- 5. Battery pack should be charged for 24 hours every 6 months during storage.
- 6. Battery in this unit may not be fully charged. After electricity is connected to the unit for at least 24 hours before normal operation.
- 7. Do not mount near gas or electric heaters. Do not let power supply cords touch hot surfaces.
- 8. Do not make or leave any other open holes in the wiring enclosure or electrical component enclosure during installation.

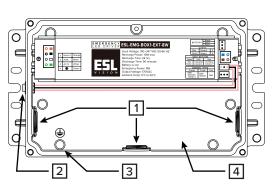

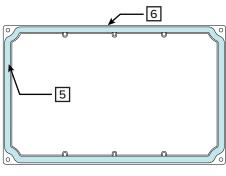

- 1 WIRE INTERFACE
- 2 CHARGE INDICATOR / TEST BUTTON
- 3 GROUND
- 4 JUNCTION BOX
- 5 GASKET
- 6 WATERPROOF JBOX COVER

Standard Installation

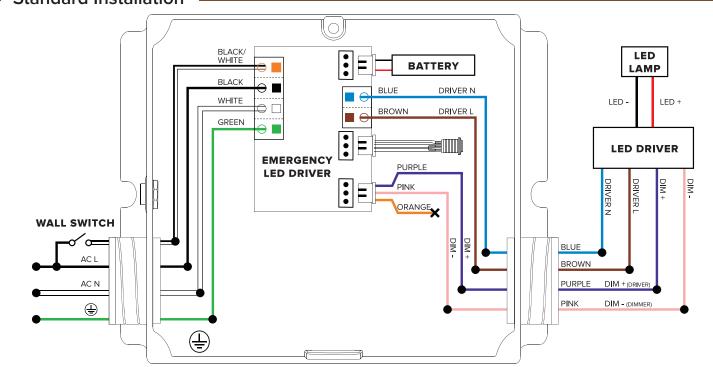








EMERGENCY DRIVER SERIES

EMG BOX Installation Guide

Page 2 of 2

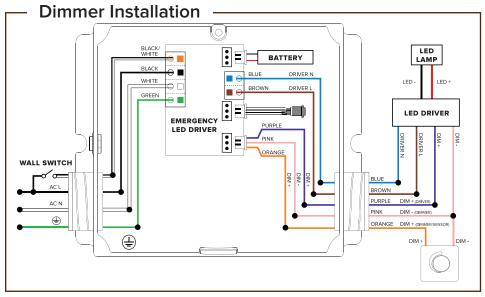

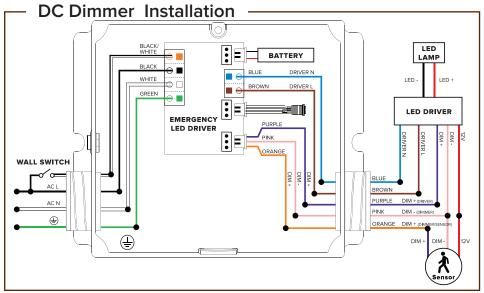

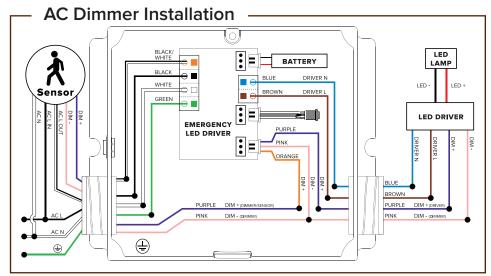



info@eslvision.com