



### **WARNING**

1. To avoid electric shock, disconnect power at source prior to installation.
2. The installation should be performed by qualified electricians or lighting technicians.
3. Before conducting any installation, maintenance, or removal, disable all power.
4. Do not touch the fixture while it is in service.
5. If there is any problem with the fixture, turn off power and **DO NOT** attempt repair unless you are a qualified technician or the customer service member.
6. For wet location usage, please caulk the edge of the fixture with glue to the ceiling.


### Package Contents

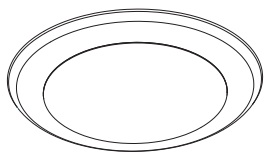

LED Disk Fixture (1)

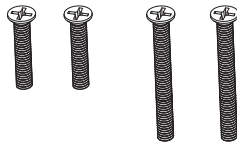

Mounting Screws (4)

 


4-Port Connectors (3)




Mounting Bracket (1)  
(4" Fixture Only)


### Installation

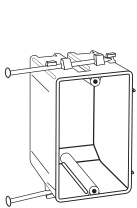


**1** Insert the included mounting screws into the junction box. Fixtures are compatible with single gang, 3.5" and 4" J boxes as well as single gang mud rings. The 4" fixture requires the included mounting bracket for 3.5" and 4" J boxes.

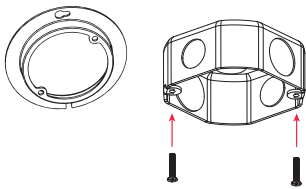


**2** Remove the lens from the fixture by twisting it clockwise.

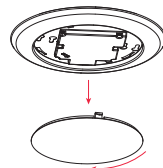


**3** Locate the CCT switch on the center of the disk and select your desired setting.

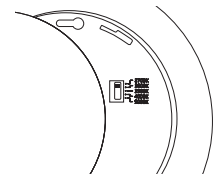

**4** Use included 4-port connectors to connect the wires. Ensure the copper ground is secure. Arrange the wires into the back of the junction box.

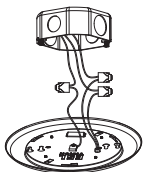

**5** Align the holes on the fixture with the mounting screws. Attach the fixture to the junction box by twisting clockwise until it locks into place.

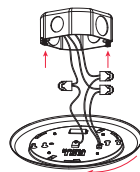

**6** Reinstall the lens onto the fixture by rotating it counter-clockwise until it locks in place.

