



! WARNING

1. To avoid electric shock, disconnect power at source prior to installation.
2. The installation should be performed by qualified electricians or lighting technicians.
3. Before conducting any installation, maintenance, or removal, disable all power.
4. Do not touch the fixture while it is in service.
5. If there is any problem with the fixture, turn off power and **DO NOT** attempt repair unless you are a qualified technician or the customer service member.


Package Contents

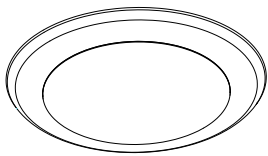

6" LED Disk (1)

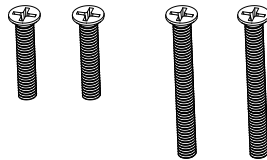


Mounting Screws (4)

 


4-Port Connectors (3)


Installation

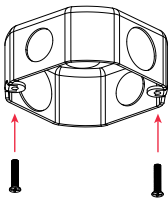


1 Make sure the power is off. Insert included mounting screws into the junction box. This fixture is compatible with 2.75", 3.5", and 4" junction boxes.

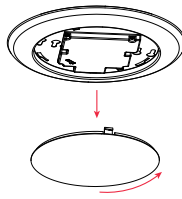


2 Remove the lens from the fixture by twisting it counter clockwise.

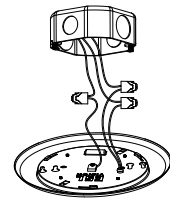


3 Use the included 4-port connectors to connect the wires. Ensure the copper ground is secure. Arrange wires into the back of the junction box.

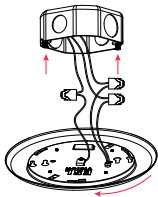

4 Align the holes on the fixture with the mounting screws. Attach the fixture to the ceiling by twisting clockwise until it locks in place.

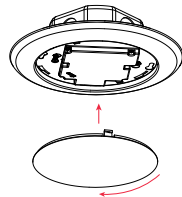

5 Re-install the lens onto fixture by rotating the lens clockwise until it locks in place.

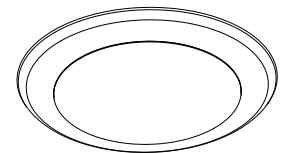

6 Restore the power and test to confirm the fixture is functioning properly.