

RESIDENTIAL TRIM DOWNLIGHT SERIES

RTL Installation Guide


- 1. To avoid the risk of fire or electric shock, disconnect power at the source prior to installation.
- 2. The installation should be performed by qualified electricians or lighting technicians.
- 3. To prevent damage, do not expose wiring to sheet metal edges or other sharp objects.
- 4. Do not make holes or alter the enclosure or components during kit installation.
- 5. If there is any problem with the fixture, turn off the power and DO NOT attempt repair unless you are a qualified technician or the customer service member.

4 Inch Installation

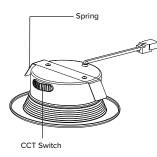


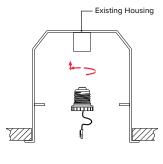

Thread the socket adapter into the socket.

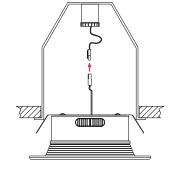


3 Plug the female connector of the retrofit into the male connector of the socket adapter assembly.

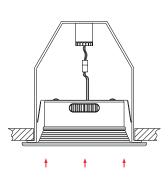


A Squeeze both spring arms together and insert into the slots of the can. Tuck all wires into the can and carefully push the retrofit downlight into the can housing.

• Set the CCT switch to your desired color temperature.




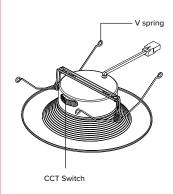


Set the CCT switch to your desired color temperature. If installing into a 5" housing adjust the V spring to suit. If installing into a 6" housing no adjustment is needed.

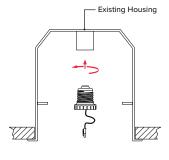

2^{Thread} the socket adapter into 2^{the} socket.

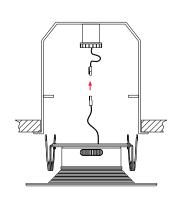

3 Plug the female connector of the retrofit into the male connector of the socket adapter assembly.

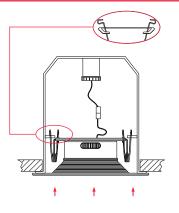

4 Squeeze both spring arms together and insert into the slots of the can. Tuck all wires into the can and carefully push the retrofit downlight into the can housing.

www.eslvision.com

Page 1 of 2

RESIDENTIAL TRIM DOWNLIGHT SERIES

RTL Installation Guide

ISION

Page 2 of 2

